

Wintal[®]

RX-1000

2 CH Stereo AM/FM Receiver



User's Manual

Important Safety Instructions

NOTICE! !

Thank you for purchasing our product.

To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.



CAUTION
RISK OF SHOCK



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Only refer servicing to qualified service personnel.

Explanation of Graphical Symbols



The lightning flash & arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of danger.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

Voltage

Voltages are 240V AC, 50Hz.

This device complies with Part 15 of the FCC Rules. Operation is subject of the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Wet Location Marking-C-UL

"Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, placed on the apparatus."

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions - The safety and operating instructions should be retained for future reference.

3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow Instructions - All operating and use instructions should be followed.

5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Getting Started

13. Unplug this apparatus during lighting storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way. Such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus. The apparatus has been exposed to rain or moisture. Does not operate normally or has been dropped.

15. Cleaning - Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

16. Power lines - An outdoor antenna should be located away from power lines.

 
17. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

These servicing instructions are of use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



Set up and Maintenance

- Provide spaces for sufficient ventilation as indicated:

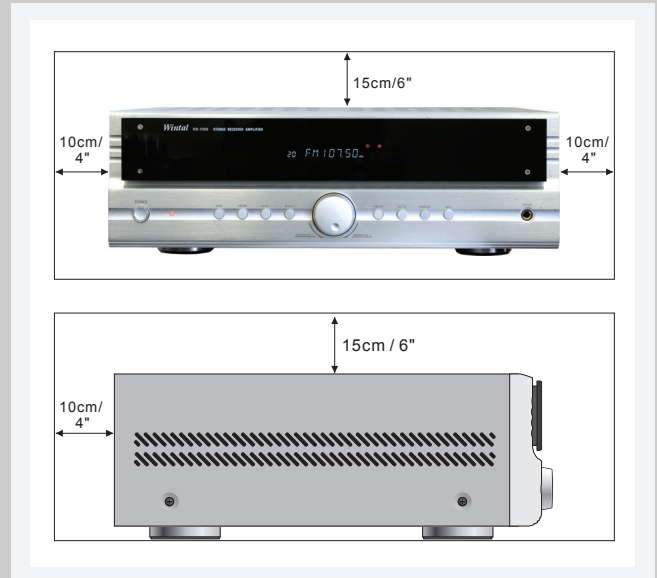

- Do not connect to the AC power cords until all units are connected properly.
- Do not use your receiver immediately after transferring it from a cold place to a warm place, there is a risk of condensation.
- Do not expose your receiver to water and excessively high temperatures.
- After having disconnected your receiver, clean the case with a soft cloth, or with a slightly damp leather chammy. Never use strong solvents.

Protect your receiver from Overheating

- Do not block ventilation holes in any unit. Arrange the receiver so that air can circulate freely.
- Do not stack the receiver directly on top of each other.
- Allow adequate ventilation when placing your receiver on a stand
- Place an amplifier near the top shelf of the stand so heated air rising from the unit will not affect other units. If you have a satellite receiver place it on the top shelf.

TABLE OF CONTENTS

FIRST THING FIRST	2
- Unpack the receiver	2
- About the remote control	3
- Basic connections	4
- Connecting the speakers	5
- Connecting for power	6
- Using headphones	6
RECEIVER CONTROLS & OPERATIONS	7
- General Controls	7
- Display Messages	8
- Tuning the Receiver	8
- Select the AM/FM Band	8
- Manual Tuning	8
- Auto Tuning	8
- Storing Stations in Memory	9
- Store Station	9
- Manual Preset	9
- Retrieving Preset Stations	9
CONNECTING AUXILIARY COMPONENTS	10
- Before you connect	10
- Connecting a CD Unit	11
- Connecting a Tape Deck	11
- Remote Control	12
CARE AND MAINTENANCE	13
- Troubleshooting Tips	13
- Receiver/Tuner Operation	13
- Remot Control Operation	13
- General	13
- Cleaning the Exterior	13
SPECIFICATIONS	14

FIRST THING FIRST

 
UNPACKING THE RECEIVER

You should receive the following items:


One receiver unit




One Remote Control

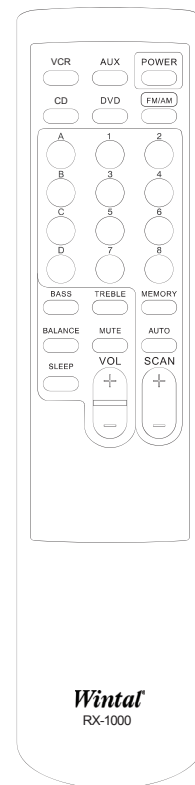

Indoor FM antenna

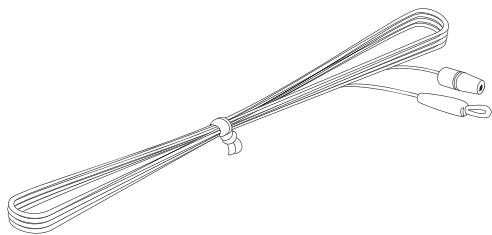 

AM loop antenna

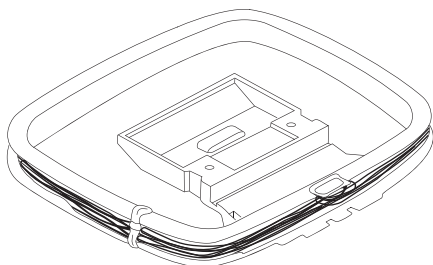 

One instruction book



 
FIRST THING FIRST

ABOUT REMOTE CONTROL

Installing batteries in the remote controller

Since the remote controller will be used for many of this unit's control operations, you should begin by installing the supplied batteries.

1. Turn the remote controller over and slide the battery compartment cover in the direction of the arrow.
2. Insert the batteries (AAA) according to the instructions inside the battery compartment.
3. Close the battery compartment cover.

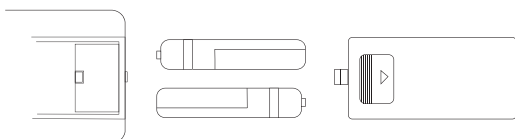

CAUTION

Danger of Explosion if battery is incorrectly replaced.

Notes about the remote controller

 
Batteries replacement

If you find that the remote controller must be used close to the main unit then the batteries are weak. Replace both batteries with new ones.

Notes

- Use AAA, batteries.
- Be sure the orientation are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote controller is not used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material and contact with clothing. Clean the battery compartment thoroughly before installing new batteries.

Remote controller operation range

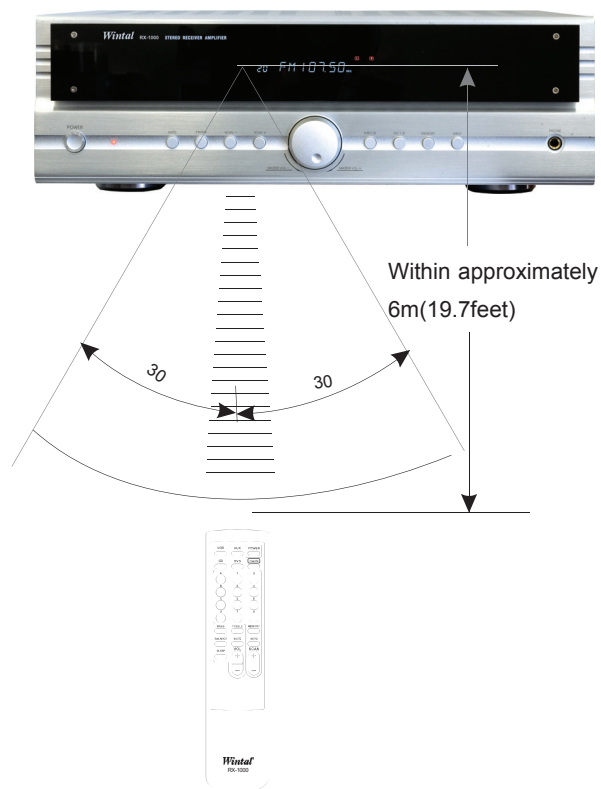

Notes

- The area between the remote controller and the main unit must be clear of large obstacles.
- Do not expose the remote control sensor to strong lighting, in particular an inverter type fluorescent lamp. Otherwise, the remote controller may not work properly. If necessary, position the main unit away from direct lighting.

 
FIRST THING FIRST

BASIC CONNECTIONS

Assuming you have a DVD, the following steps will help you quickly set up your new receiver. If you have more electronic components, consult the table of contents or index for the page on which to find the connection description that best suits your situation.

* *the wires(bought from store) and jacks have been color-coded to assist you.*

1. Using an audio wire with red and white connectors, connect the audio OUT jack on the back of our stereo DVD to the audio IN jack under the DVD heading on the back of the receiver.
2. Using the video cable with yellow connectors, connect the video OUT jack on the back of your DVD to the VIDEO IN or VIDEO INPUT on the back of your TV. If there are multiple video jacks on the back of your TV, use VIDEO 1.

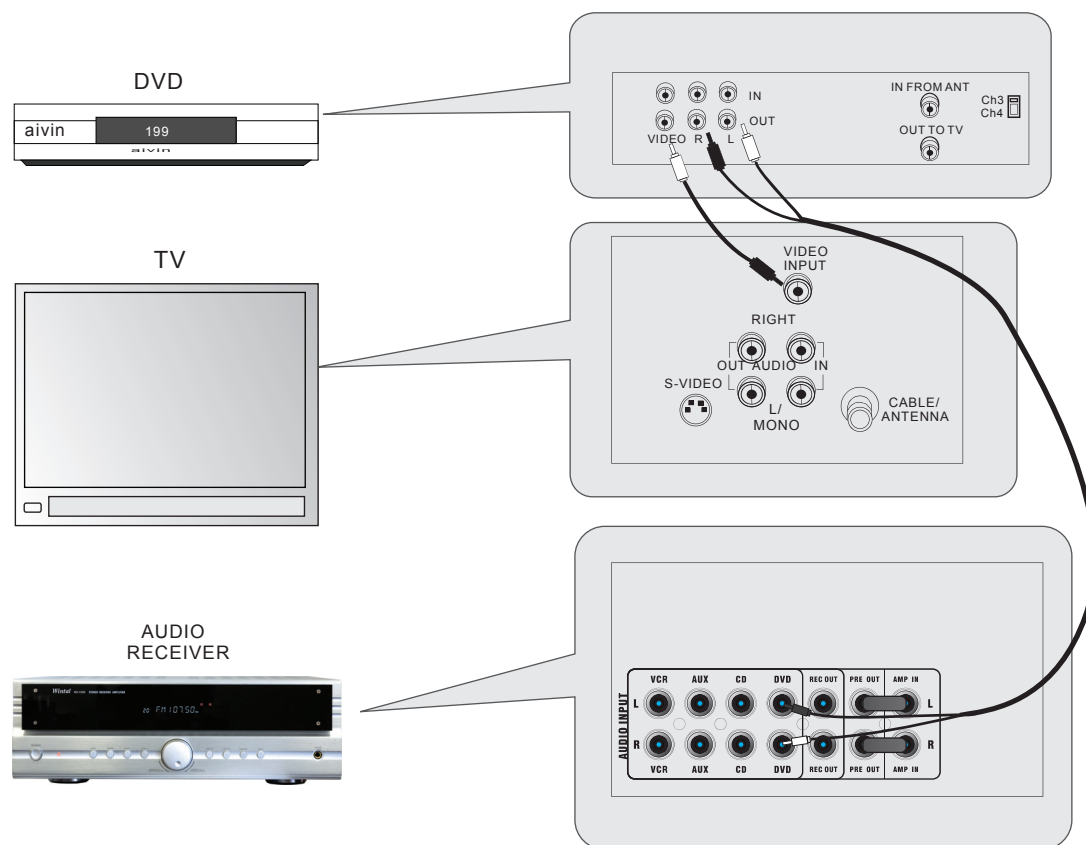

FIRST THING FIRST

CONNECTING THE SPEAKERS

CONNECTING THE WIRES

 
1. Loosen the knob.
2. Insert the bare wire. [Remove approx. 5mm(1/4) insulation from the speaker wires.] Tighten the knob and secure the wire. Or you also may use a banana plug.

Speaker Polarity


When connecting the speakers, make sure the polarities ("+" speaker wire to "+" on the receiver) of speaker wires and terminals are matched. If the cords are reversed, the sound will be distorted and will lack bass ("out of phase" effect).

NOTE:

Do not let the bare speaker wires touch each other or any metal part of this unit. This could damage the unit or the speakers, or both. Connect the speakers terminals to your speakers with the wire of the proper gauge (keep as short as possible). If the connections are faulty, no sound will be heard from the speakers.

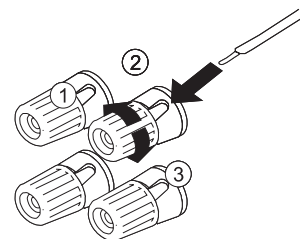

Method 1

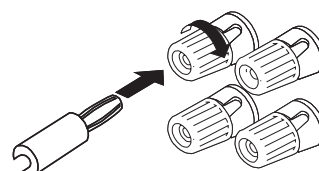 


Method 2

CONNECTING THE MAIN SPEAKERS

The two main speakers should be set between six and 10 feet apart. Putting the speakers any closer or any farther apart may result in distorted sound. The speakers should also form a 45 degree angle to the central listening point in the room, creating a triangle of listening enjoyment.

CONNECTING THE ANTENNAS

 
The AM and FM antennas connect to the AM and FM terminals on the system's back panel. They must be hooked up for you to receive clear reception. Uncoil the antenna wires and locate the bare ends. Press down on the tab to open the terminal and insert the wire. Snap the tab closed. After connecting the antennas, extend them to their full length and adjust their positioning for better reception.

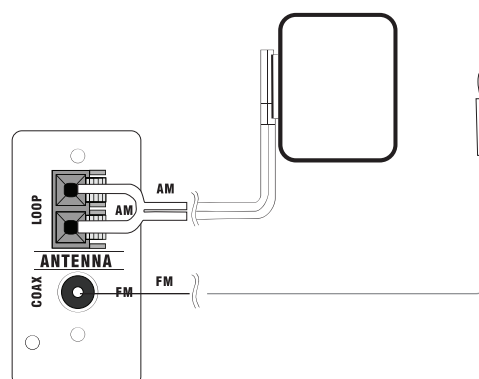

FIRST THING FIRST

CONNECTING FOR POWER

 Make sure you connect all your other electronic components and the speakers before plugging your receiver into the outlet. Plug the power cord in the wall outlet, matching the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

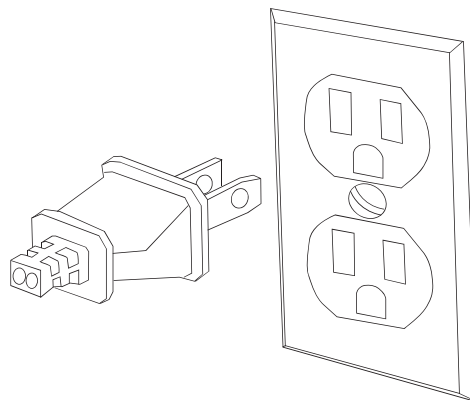

USING HEADPHONES

 
To listen privately through your audio system, use the PHONES jack on the receiver. However, make sure you turn down the volume before you put on the headphones. Increase the volume to the desired level after headphones are in place.

Hearing Comfort & Well-Being

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.



RECEIVER CONTROLS & OPERATIONS

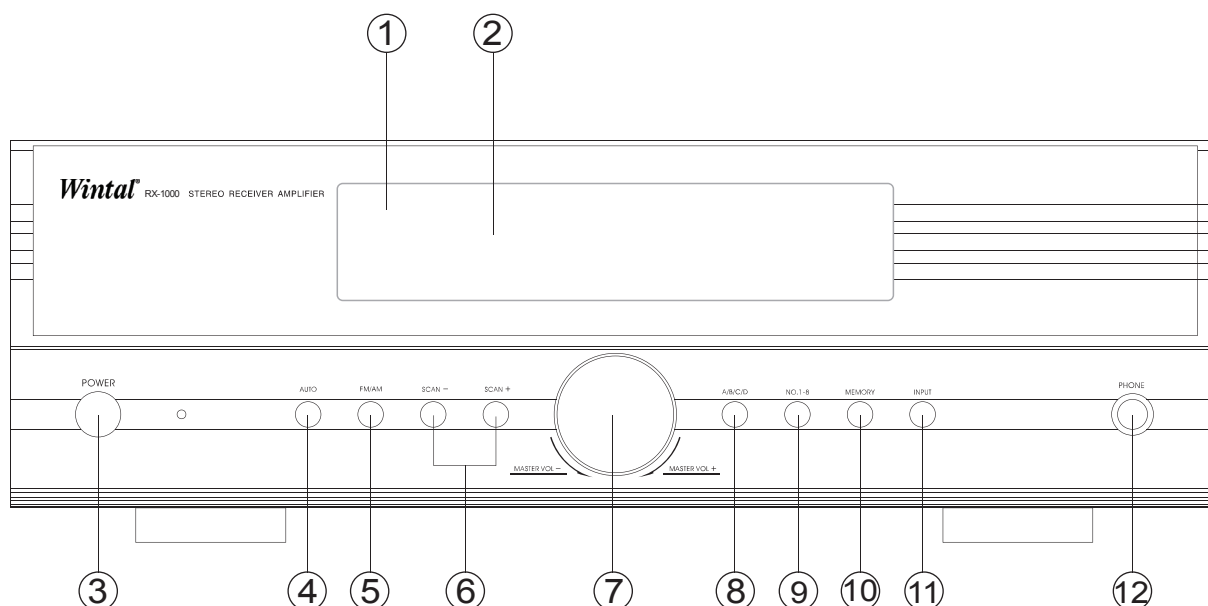

GENERAL CONTROLS

1. Remote control sensor

Receives signals from the remote controller.

2. Display panel

Display a variety of information. e.g. source etc.

3. POWER switch

Press this switch to turn on the power. Press the switch again to turn off the power.

4. TUNER automatically tuning button

Press and hold the button for 3 seconds, All stations are stored automatically. (AM/FM is detached)

5. FM/AM band switches button

Press the button to select input source tuner and switch the reception band between FM and AM.

6. TUNING SCAN+,SCAN- buttons

Press the SCAN+side to tune in to a higher Frequency. Press the SCAN-side to tune in to a lower frequency.

7. MASTER VOLUME.

Rotate the knob to adjust volume. Volume increase when rotated clockwise, volume reduction knob is rotated anti-clockwise.

8. A/B/C/D button

Press the button to select a group of preset stations on the tuning status.

9. Number 1-8 button

Press the button to call preset station number on the tuning status.

10. MEMORY button

Use the button to enter a station to memory.

11. Input selector knob

Press the button to select the input source you want to listen to.

12. PHONE jack

Allows you enjoy for private listening with headphones. When you connect headphones, no signals are output to all speakers.

RECEIVER CONTROLS & OPERATIONS

DISPLAY MESSAGES

The following is an example of all the display messages you may encounter while using your receiver. Specific messages are referenced within the section(s) they apply.



STEREO

- Tuner stereo signal detected.

TUNED

- Tuner station detected.

SLEEP

- Unit in Sleep mode

KHz

MHz

- Tuner frequency unit

TUNING THE RECEIVER

SELECT THE AM/FM BAND

1. Push the **FM /AM** button on the front panel (or the **AM/FM** button on the remote) to activate the tuner.
2. When using the remote you must press the **AM/FM** button on the remote again to select the FM or AM band.

MANUAL TUNING

Press the **SCAN+** button on your remote button to move up the AM or FM band. Press the **SCAN-** arrow button on your remote to move down the AM or FM band. You may press and hold **SCAN+** or **SCAN-** buttons 3 seconds to automatically find the next station.

NOTE:

1. If there is interference, modify the location of the antenna until the optimal sound is heard. TV and other electronic devices could be the cause of interferences so try to position the antenna away of them.
2. Weak signal can affect the "auto Search function". Adjust the antenna for better reception for more efficient search.

AUTO TUNING

Use the **AUTO** feature to automatically search for stations of sufficient strength. Press and hold **AUTO** button for 3 seconds on the remote. Radio frequencies will be browsed and radio stations stored automatically. When all available radio stations are stored or if all 32 memory locations are full, the auto preset will stop.

RECEIVER CONTROLS & OPERATIONS

Note:

Weak signal can affect the "Automatic Preset Storing function" efficiency. Adjust the antenna for the best reception for more efficient search.

STORING STATIONS IN MEMORY

You can store up to 32 AM and FM stations, these stations can be stored in random order.

TO STORE A STATION

1. Press the **FM/AM** button on the front panel (or the **AM/FM** button on the remote).
2. Select the station you want to store in memory using the methods described above.
3. Press the **MEMORY** button on the remote "MEMORY" blinks in the display. While "MEMORY" is blinking, press number buttons on the remote for the station.

If the Memory indicator on the display turns off before you preset your station selection, press MEMORY again.

MANUAL PRESET

1. Select the band wave by pressing FM/AM repeatedly.
2. Tune to a radio station (see "Manual tuning" on page 8 above for details).
3. Select a group (A- D) of preset stations. This group will be displayed on the front panel display. For example: "A".

4. Press **MEMORY** on the remote control. "MEMORY" will appear on the display.
5. While the word "MEM" is still on, input your desired preset number(1-8) using the numeric keys on the remote control to store the radio station. For example this number is "1". This station is stored to "A1".
7. In the same way, program other stations to A2, A7. You can program more stations to the preset station numbers on other groups in the same way by selecting other groups in step 3.

 
NOTE:

A new setting can be programmed in place of the former one.

RETRIEVING PRESET STATIONS

1. Press **FM/AM** button on the front panel or the remote control to select tuner mode.
2. Press **A/B/C/D** button on the front panel or the remote control to select the group of preset station that you desired.
3. Press the numeric keys button on the remote control to select the number of preset stations that you desire. Stations selected is displayed on the front panel display.
4. In the same way, You can select other stations stored.

RECEIVER CONTROLS & OPERATIONS

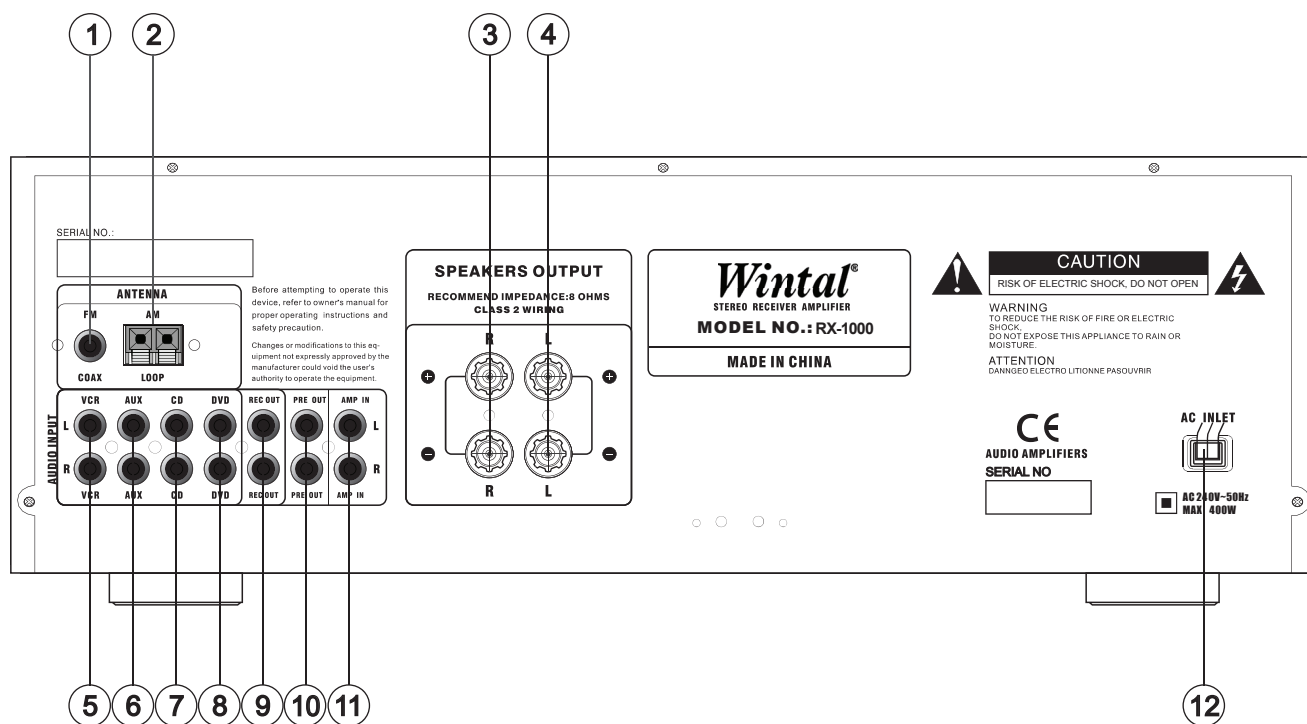

1. FM antenna input
2. AM antenna input
3. Right channel speaker output
4. Left channel speaker output
5. VCR Audio input jacks
6. AUX Audio input jacks
7. CD audio input jacks
8. DVD audio input jacks

9. REC audio output jacks (The level is controlled by master volume)
10. Pre out jacks (A short plug is used between 12 and 13 jacks)
11. Amplifier input jacks (A short plug is used between 12 and 13 jacks)
12. AC 240V/50Hz power input plug

BEFORE YOU CONNECT

CONNECTING THE CABLES

- Protect components from power surges.
- Connect all components before plugging power cords into the wall outlet.
- Always turn off the receiver and/or components before you connect or disconnect any cables.
- Always make sure the color-coded plugs match the color of the terminals in which they are inserted.
- The connection cable plugs and jacks are color-coded as follows:

Speaker Terminals

Red for positive (+) terminals.
Black for negative (-) terminals.

- Some units may be supplied with connection plugs that are color-coded red and black instead

of red and white. In this case, the black plug takes the place of the white plug.

POSITION CABLES CORRECTLY TO AVOID AUDIO HUM OR INTERFERENCE

- Insert all cable plugs firmly into their jacks.
- Place audio/video cables to the sides of the receiver's back panel instead of straight down the middle after you connect the components.
- Try not to coil any power cables and keep them away from the audio/video cables as much as possible.
- Make sure all antennas and cables are properly grounded. Refer to the Safety Tips sheet packed with your receiver.

CONNECTING AUXILIARY COMPONENTS

 
CONNECTING A COMPACT DISC PLAYER

Using one paired (red/white) stereo cable, connect your new receiver to your compact disc player as shown to the right.

To play a CD, press CD, put the receiver in CD mode and press PLAY.

NOTE:


The AUDIO SOURCE connection can be used as input for any stereo audio signal.

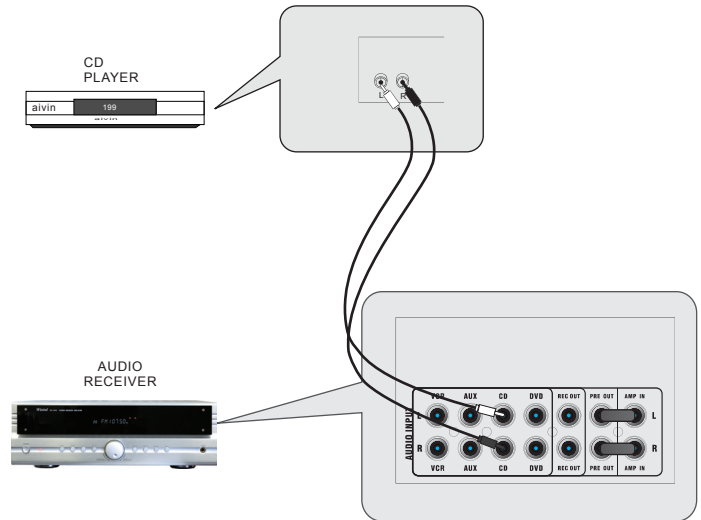

CONNECTING A TAPE DECK

Using two paired (red/white) stereo cables, connect your new receiver to your tape deck as shown in the diagram to the right.

 To play a tape, press CD and then PLAY. To record a tape, turn on the audio source you want to record from and then press record from and then press RECORD on the tape player.

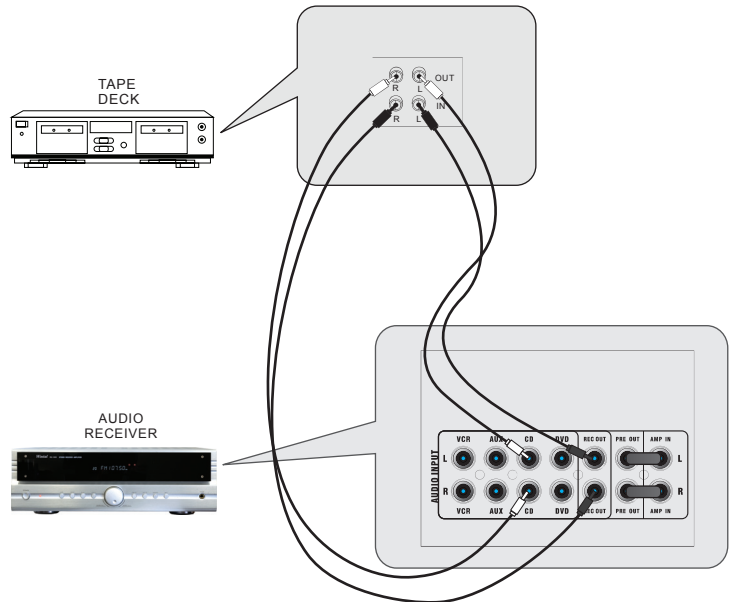

CONNECTING AUXILIARY COMPONENTS

REMOTE CONTROL

1. Input selector buttons

Press these buttons to select a analog input source.

2. A/B/C/D button

Press the button to select a group of preset stations.

3. BASS Parameter selector button

Press the button to select bass tone. then press "8" buttons to adjust the low-frequency response.

4. TREBLE Parameter selector button

Press the button to select treble tone. Then press "8" buttons to adjust the high-frequency response.

5. BALANCE Parameter selector button Press the button to select balance. then press "8" buttons to adjust the balance between left and right.

6. MUTE

Mute the sound. Press again to restore the audio out to the previous volume level.

7. SLEEP button

Press the button repeatedly to turn the sleep timer on and off, and set the sleep time (10-20-30-40-50-60-70-80-90mins).

8. PARAMETER selected and MASTER VOLUME adjustment buttons

To adjust parameter selected or main volume.

9. Standby button

Press this button to set this in the standby mode. Press again turn on the power of this unit.

10. FM/AM band switches button

 
Press the button to select input source is tuner and switch the reception band between FM and AM.

11. Number 1-8 button

Press the button to call preset station number on the tuning status.

12. MEMORY button

Use the button to enter a station to memory.

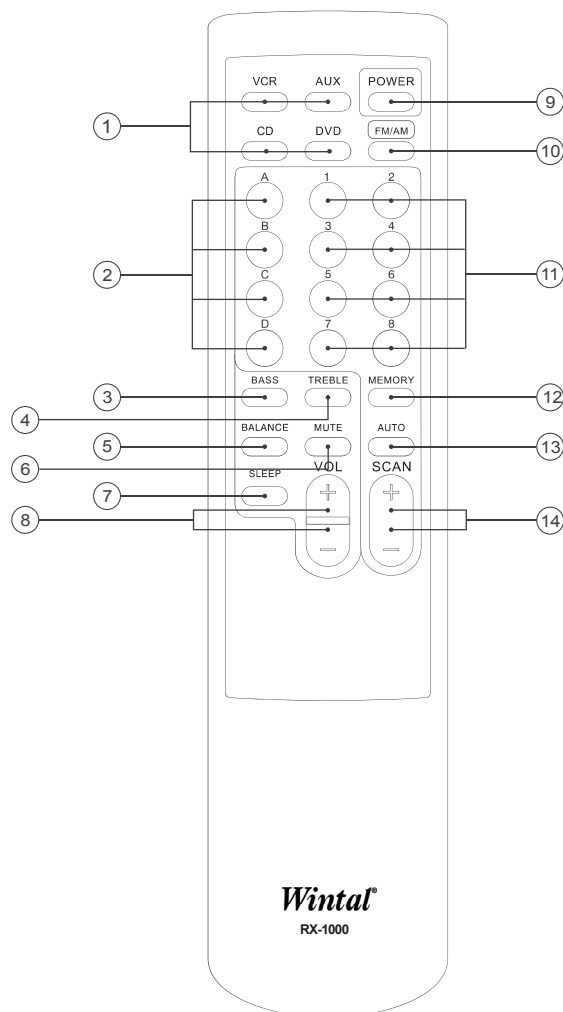

13. TUNER automatically tuning button

Press and hold the button for 3 seconds, All stations are browsed and stored automatically. (AM/FM is detached)

14. TUNING SCAN+,SCAN- buttons

Press the SCAN+side to tune to a higher frequency. Press the SCAN-side to tune to a lower frequency.

CARE AND MAINTENANCE

TROUBLESHOOTING TIPS

RECEIVER/TUNER OPERATION

STEREO indicator is off.

- Adjust the antenna.
- The signal is too weak. Connect an external antenna.
- The signal is Mono.
- Sever hum or noise.
- The signal is too weak. Connect an external antenna.

REMOTE CONTROL OPERATION

The remote control does not operate the unit.

- Another function is selected on the remote. Press the correct function button.
- No batteries installed. Install the batteries before attempting to operate the remote. Be sure to match the + and ends of each battery to the symbols shown in the remote battery compartment.
- The batteries are exhausted. Replace all batteries.
- The remote is not pointed at the remote control sensor on the main unit or there is an obstacle between the remote and the main unit.
- The remote control is too far from the main unit-Move closer.

GENERAL

No audio

- Make sure the MUTE indicator on the front panel is off.
- Make sure the speakers are turned on.
- Check the connections.
- Check the short plug between the **PRE OUT** jacks and **AMP IN** on the rear panel is inserted.
- Check the power cord connection. No audio from one channel.
- Check the speaker wire connection or connecting cable.
- Noise when the TV is turned on, the TV too close to the audio system.
- Check the connection between the receiver and the speaker. The sound does not match the video.
- Press the function button for the video source.

CLEANING THE EXTERIOR

- Disconnect the system from AC power before cleaning the exterior of the system with a soft dust cloth.

EQUIPMENT SPECIFICATIONS

AMPLIFIER SECTION

Left & Right Channel	2X100Watts
Signal to Noise(A weight)	85dB
Frequency Response	20Hz-20 KHz+/-1.5 dB

AM TUNER SECTION

Frequency Response	80Hz 2.3 KHz +/- 6dB
Usable Sensitivity	55dBu @ S/N 20 dB
Signal to Noise	38 dB
Image Ratio	30 dB @ 1000KHz
IF Rejection	40 dB

FM TUNER SECTION

Frequency Response	40Hz-15 KHz+/- 3dB
Quieting	24 dBu
Signal to Noise	60 dB (stereo) /65 dB (mono)
Image Ratio	40dB
IF Rejection	65dB

Specifications are base on nominal measurements

