

QUICK USB GUIDE

If you haven't already done so, download and apply the available firmware upgrade. You can find the download link and step-by-step instructions on the [Wintal web site](#).

USB Mode


Turn on the unit

Insert your Flash Disk/ USB Stick

The USB icon will be displayed while reading the contents.

Press the USB key on your remote control to enter USB mode.

A screen similar to the following should appear.

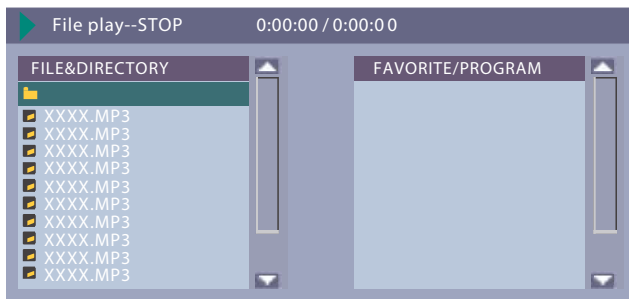

You can browse files, folders, playback your MP3 audio, JPG pictures, DivX or MPG movies by using the arrow keys on your remote to choose a file and pressing SELECT to start playback.

USB-to-DVD Archiving

When you wish to record your files on to a blank DVD, pressing the **REC** button on your remote will bring up the "USB to DVD Archiving" screen.

From here highlighting the file of your choice and pressing the "Add/Clear" button on your remote will move that file to the "**Selected File List**" column on the right hand side.

When you are satisfied with the list of files you wish to copy over, press the "REC" button again.

Just select OK to confirm the operation.

Once the operation is complete, you can remove the disc from the tray.