

# Australia's Analog (PAL) TV Broadcasting

Australian Television Broadcasting Bands and Channels

VHF		UHF			
Band I		Band IV		47	659 - 666 MHz
0	45 - 52 MHz	27	520 - 526 MHz	48	666 - 673 MHz
1	56 - 63 MHz	28	526 - 533 MHz	49	673 - 680 MHz
2	63 - 70 MHz	29	533 - 540 MHz	50	680 - 687 MHz
Band II		30	540 - 547 MHz	51	687 - 694 MHz
		31	547 - 554 MHz	52	694 - 701 MHz
3	85 - 92 MHz	32	554 - 561 MHz	53	701 - 708 MHz
4	94 - 101 MHz	33	561 - 568 MHz	54	708 - 715 MHz
5	101 - 108 MHz	34	568 - 575 MHz	55	715 - 722 MHz
Band III		35	575 - 582 MHz	56	722 - 729 MHz
		Band V		57	729 - 736 MHz
5A	137 - 144 MHz			58	736 - 743 MHz
6	174 - 181 MHz	36	582 - 589 MHz	59	743 - 750 MHz
7	181 - 188 MHz	37	589 - 596 MHz	60	750 - 757 MHz
8	188 - 195 MHz	38	596 - 603 MHz	61	757 - 764 MHz
9	195 - 202 MHz	39	603 - 610 MHz	62	764 - 771 MHz
9A	202 - 209 MHz	40	610 - 617 MHz	63	771 - 778 MHz
10	208 - 215 MHz(old)	41	617 - 624 MHz	64	778 - 785 MHz
	209 - 216 MHz(new)	42	624 - 631 MHz	65	785 - 792 MHz
	215 - 222 MHz (old)	43	631 - 638 MHz	66	792 - 799 MHz
	216 - 223 MHz (new)	44	638 - 645 MHz	67	799 - 806 MHz
	223 - 230 MHz	45	645 - 652 MHz	68	806 - 813 MHz
		46	652 - 659 MHz	69	813 - 820 MHz


# Australia's New Digital Broadcasting

Australian Digital TV Broadcasting: Channel Assignments


Area	AN.	DIG	AN.	DIG	AN.	DIG	AN.	DIG	AN.	DIG	AN	DIG
Sydney	ABN		ATN		TCN		TEN		SBS		CTV	
	2	12	7	6	9	8	10	11	28	34	31	*
Melbourne	ABV		HSV		GTV		ATV		SBS		CTV	
	2	12	7	6	9	8	10	11	28	34	31	*
Brisbane	ABQ		BTQ		QTQ		TVQ		SBS		CTV	
	2	12	7	6	9	8	10	11	28	36	31	*
Adelaide	ABS		SAS		NWS		ADS		SBS		CTV	
	2	12	7	6	9	8	10	11	28	30	31	*
Hobart	ABD		TVT		TNT				SBS			
	2	8	6	7	31	10			28	9A		
Darwin	ABD		NTD		TND				SBS			
	6	30	8	31	34	32			28	29		
Perth	ABW		TVW		STW		NEW		SBS		CTV	
	2	12	7	6	9	8	10	11	28	28	31	*
Newcastle	NBN		ABHN		NEN		NRN		SBS			
	3	36	5A 48	37	54	53	57	51	45	38		
Wollongong	ABWN		WIN		CTC		CBN		SBS			
	56	51	59	36	62	37	65	38	53	54		
Canberra	ABC		CTC		WIN		CBN		SBS			
	9	9A	7	6	31	11	34	12	28	30		
Toowoomba	ABQ		STQ		TNQ		RTQ		SBS			
	56	55	59	58	62	61	65	64	53	52		

## Modify Channel Information (Manually tuning VIA frequency)

In the Recording Settings menu, use the arrow buttons to select Modify Channel and press the SELECT button to bring up the menu.

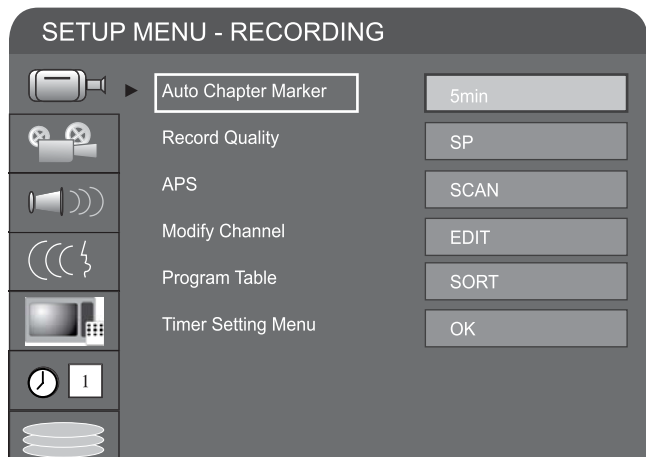

Use the ▼ button to select frequency and hit SELECT

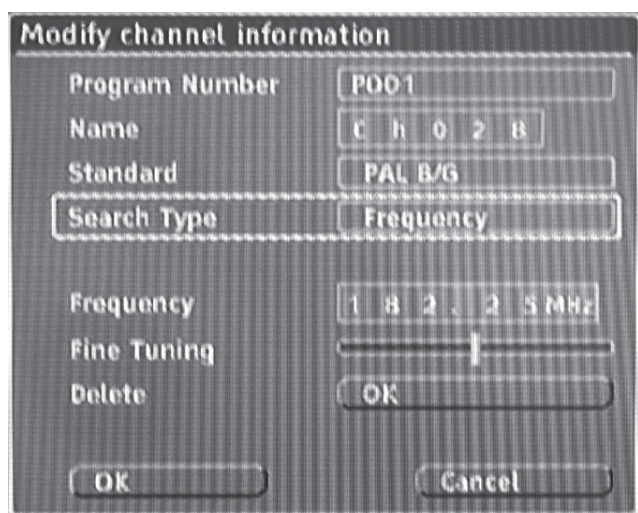

Note:

Yellow box will appear with up and down arrow. Use ▲ or ▼ buttons to select number. Use ◀ or ▶ to move across the boxes.

When changing frequency this is a delay for the television to receive the information.

Press RETURN when complete

Use the ▼ button to move to down to OK and his SELECT.