


DVDRX250

DVD Archiving Guide

copy modes >

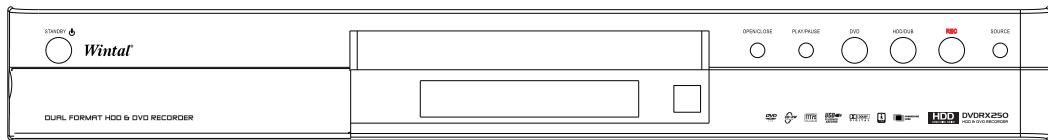

Follow this guide to back up data files such as photos, music, and more from a USB flash drive connected to your DVDRX250 on to a recordable DVD.

1. Turn on your DVDRX250 and insert a blank DVD.
2. Connect USB flash drive and press the “**USB**” button on the remote control.
The “**file manager**” will load up.
3. Using the up and down keys on your remote choose “**USB1**” from the list and press the “**Select**” button.
4. Choose the files you wish to copy across by pressing the “**Add/Clear**” button on your remote. A marked file will have a yellow check mark next to it.
5. When you are done with the file selections, press the “**Right**” arrow key on your remote and choose “**Copy**” with the “**Select**” button
6. On the “**Copy To**” screen, highlight the DVD DRIVER and press the “**Right**” arrow key and choose “Complete”
7. The DVDRX250 will begin copying your selected files and you can observe the progress at the bottom of the screen.

The above instructions also apply to when you wish to copy data files from the HDD to DVD.

Note:

To copy television recordings from the HDD to a DVD, please follow the instructions on page 17 of the DVDRX250 manual.