 


*Wintal*<sup>®</sup>

**LCD TV**

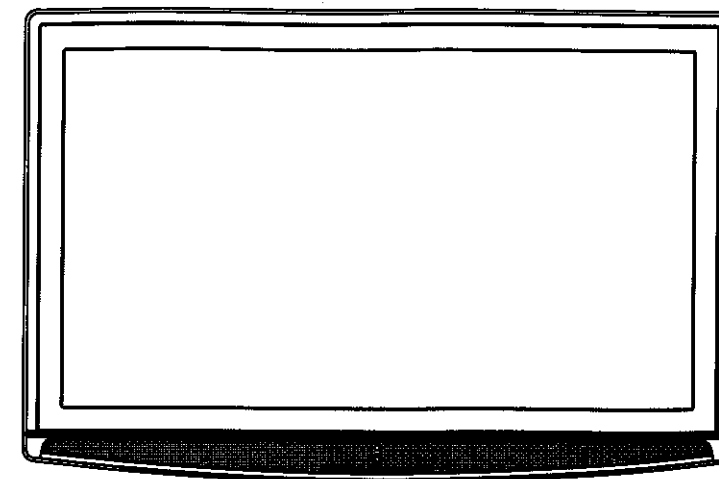

**26" LCD**  
OPERATING MANUAL  
**LCD-TV**

PLEASE KEEP THIS OPERATING MANUAL FOR FUTURE REFERENCE

## CONTENTS

<b>1 PREFACE</b> .....	2
<b>2 SAFETY PRECAUTIONS</b> .....	2
<b>3 FRONT&amp;BACK VIEW, REAR CONNECTION OF LCD</b> .....	3
<b>4 TV INSTALLATION GUIDE</b> .....	4
4.1CONNECTING ANTENNAS DRAWING .....	4
4.2 VIDEO1 INPUT DRAWING .....	4
4.3 VIDEO2 INPUT DRAWING .....	4
4.4 YPBPR1 INPUT DRAWING .....	4
4.5 YPBPR2 INPUT DRAWING .....	5
4.6 PC (VGA) INPUT DRAWING .....	5
4.7 HDMI INPUT DRAWING.....	5
4.8 EARPHONE DRAWING.....	5
4.9 COAXIAL DRAWING.....	5
<b>5 CONFIGURATION OF THE LCD</b> .....	6
5.1 PICTURE SETTING.....	6
5.2 SOUND SETTING.....	6
5.3 TIME SETTING .....	7
5.4 OPTION SETTING.....	7
5.5 CHANNEL SETTING.....	8
5.6 LOCK SETTING .....	8
USB INSTRUCTIONS .....	13
<b>6 REMOTE CONTROL INSTRUCTIONS</b> .....	17
<b>7 REMOTE CONTROLS SETUP</b> .....	19
7.1 BATTERY USAGE CAUTION .....	19
<b>8 ACCESSORIES</b> .....	19
<b>9 TROUBLE SHOOTING AND ADVICE</b> .....	20
<b>10 SPECIFICATIONS</b> .....	21

## 1 PREFACE

Thank you for purchasing this LCD TV! This manual will help you use all the extensive features of your new TV. Make sure the monitor was not damaged in transit. Should the monitor is damaged, do not install it and contact your dealer. Check that you have all the accessories according to the model.

 
## 2 SAFETY PRECAUTIONS



Put the monitor on a stable surface.  
Do not use the monitor with others fixations than those provided or suggested by the manufacturer.



Do not place any material on the monitor.



If you have a wall mount, check that it is steady.



Do not block or cover the ventilation openings on the monitor

### Power source



 
The monitor must be plugged with a tension source of 100-240V and 50/60 Hz.

### Connection cables

Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the monitor to fall.

### Heating sources and humidity

Keep the monitor dry and away from humidity.



Keep the monitor away from heat sources.

### Cleaning and maintenance



Unplug the monitor before cleaning it. Do not use solvents or liquids to clean the monitor. Only clean the monitor with a soft and dry cloth.  
In case of troubleshooting, does not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks short-circuits fire or other incidents.

 
### Departure in holidays




Unplug the TV during lightning storms or when unused for long periods of time.

## 3 FRONT & BACK VIEW, REAR CONNECTION OF LCD

### Front View

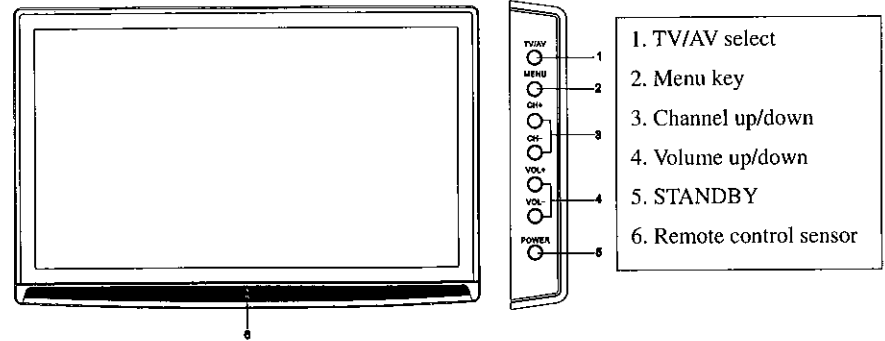


### Back View

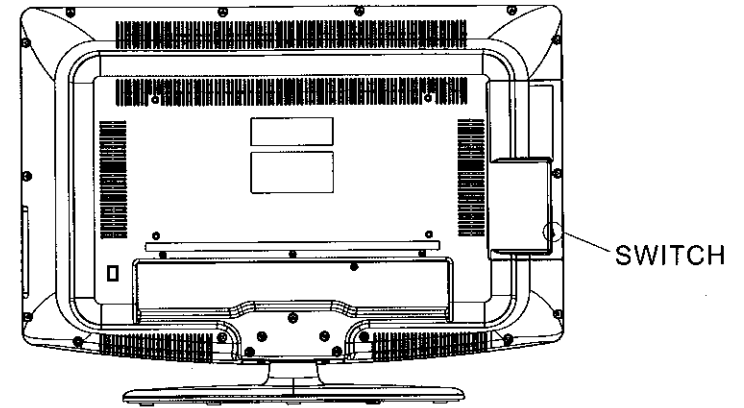 


*(The backview is only for your reference; details according to the model)*

### Rear Connection

 


## 4 TV INSTALLATION GUIDE
 
### 4.1 CONNECTING ANTENNAS DRAWING

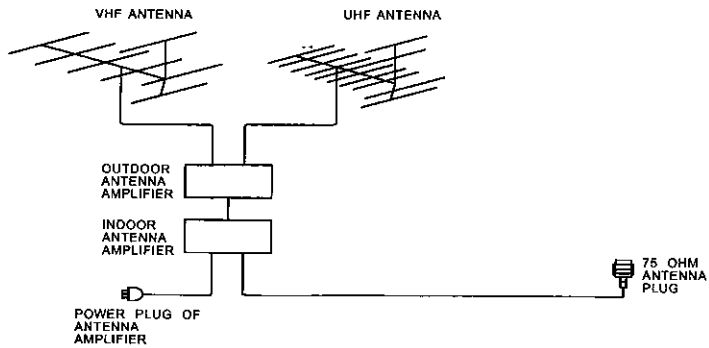


To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as shown can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-ohm antenna plug into the antenna jack as show in case of signal of closed circuit TV


### 4.2 VIDEO1 INPUT DRAWING

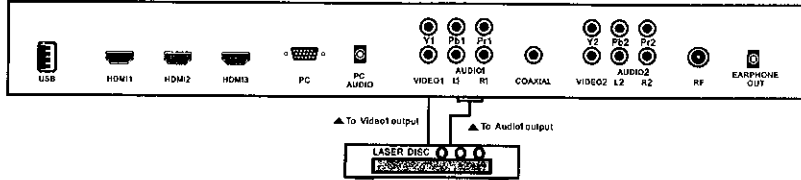 


### 4.3 VIDEO2 INPUT DRAWING

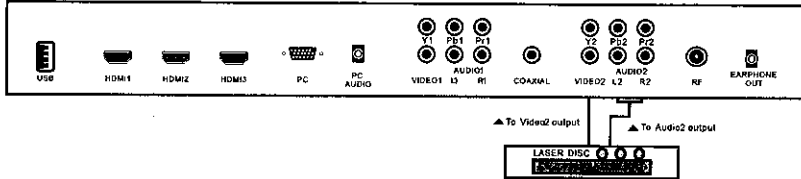 


### 4.4 YPBPR1 INPUT DRAWING

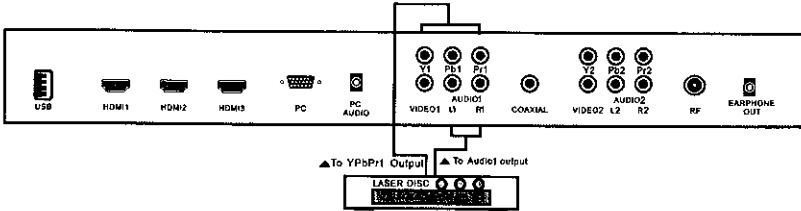 


### 4.5 YPBPR2 INPUT DRAWING

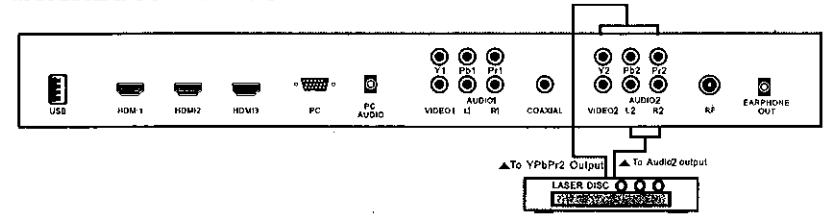 


### 4.6 PC (VGA) INPUT DRAWING

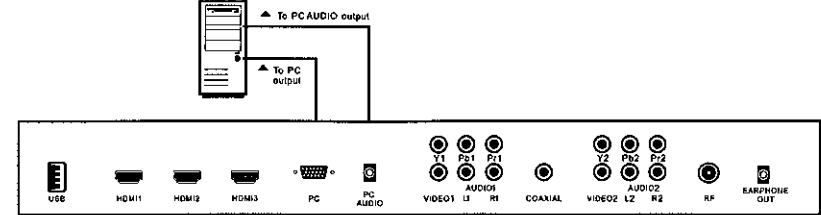 


### 4.7 HDMI INPUT DRAWING

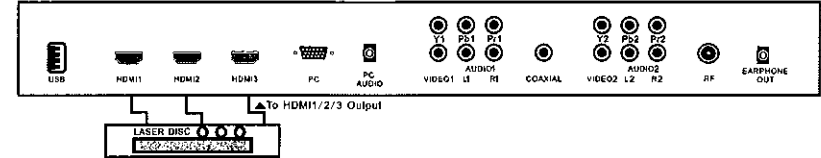 

### 4.8 EARPHONE DRAWING

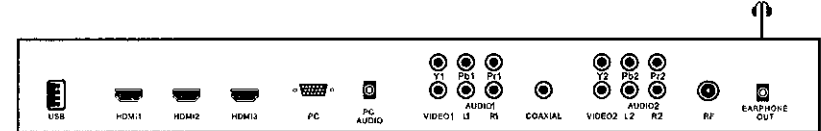 

### 4.9 COAXIAL DRAWING

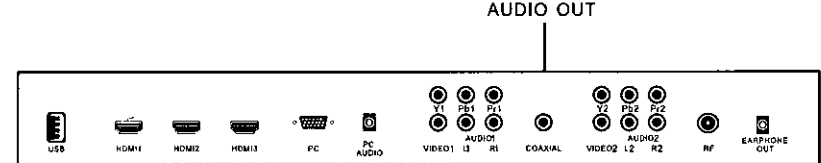 

## 5 CONFIGURATION OF THE LCD

### 5.1 PICTURE SETTING

Press <MENU> Key, then enter the Menu.

a) Press ▼ and enter Picture Setting Menu. Press ▲ or ▼ key and enter Picture Mode, Contrast, Brightness, Color, Sharpness, Tint, Color Temperature, Red, Green, Blue, Aspect Ratio, Noise Reduction, Screen.

b) Press ◀ or ▶ key to access and adjust Picture Mode, Contrast, Brightness, Color, Sharpness, Tint, Color Temperature, Red, Green, Blue, Aspect Ratio, Noise Reduction, Screen.



### 5.2 SOUND SETTING

Press <MENU >, then press ▶ key

a) Press ▼, then enter Sound Setting Menu. Press ▲ or ▼ key to enter Sound Mode, Treble, Bass, Balance, Auto Volume, Surround Sound, SPDIF MODE

b) Press ◀ or ▶ Key to access and adjust Sound Mode, Treble, Bass, Balance, Auto Volume, Surround Sound, SPDIF MODE



### 5.3 TIME SETTING

Press <MENU> key, then press ▶ key

a) Press ▼, then enter TIME Setting Menu. Press ▲ or ▼ key and enter Clock, Off Time, On Time, Sleep Timer, Auto Sleep, Time Zone

b) Press ◀ or ▶ key to access and adjust Clock, Off Time, On Time, Sleep Timer, Auto Sleep, Time Zone



### 5.4 OPTION SETTING

Press <MENU> key, then press ▶ key

a) Press ▼, then enter OPTION Setting Menu. Press ▲ or ▼ key and enter OSD Language, Audio Languages 1st, Audio Languages 2nd, Subtitle Languages 1st, Subtitle Languages 2nd, OSD Duration, Country, Restore Factory Default.

b) Press ◀ or ▶ key to access and adjust OSD Language, Audio Languages 1st, Audio Languages 2nd, Subtitle Languages 1st, Subtitle Languages 2nd, OSD Duration, Country, Restore Factory Default.



### 5.5 CHANNEL SETTING

Press <MENU> key, then press ► key,

- Press ▼ then enter CHANNEL Setting Menu. Press ▲ or ▼ key and enter Auto Scan, DTV Manual Tuning, ATV Manual Tuning, Programme Edit, Signal Information, Record Start, Recorded List, Recorded Mode, Schedule List, PVR File System.
- Press ◀ or ▶ key to access and adjust Auto Scan, DTV Manual Tuning, ATV Manual Tuning, Programme Edit, Signal Information, Record Start, Recorded List, Recorded Mode, Schedule List, PVR File System.



 
### 5.6 LOCK SETTING

Press <MENU> key, then press ► key,

- Press ▼ then enter CHANNEL Setting Menu. Press ▲ or ▼ key and enter Lock Channel, Set Password, Block Program, Parental Guidance

- Press ◀ or ▶ key to access and adjust Lock Channel, Set Password, Block Program, Parental Guidance

NOTE: The initial password is 0000, Universal password is 8899

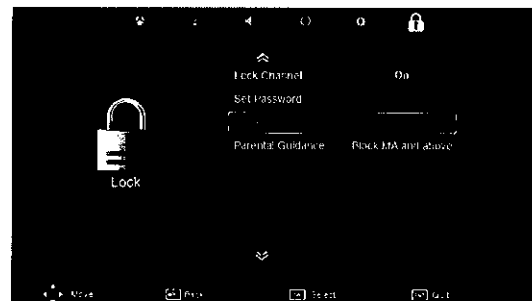

### Personal Video Recorder (PVR)

 
#### PVR Instructions

PVR function effectively only in DTV, including the Record, Timeshift and Playback functions. One of the record including Real-time recording and booking recording. Real-time recording by shortcuts can be implemented immediately, booking recording by timing booking to achieve. Record and Playback can be performed at the same time, which can record DTV are broadcast programs, play USB devices have copied programs. Timeshift is edge recording while playing a kind of application.

#### PVR Menu function instruction

##### PVR File System

Press MENU Key enter into CHANNEL Setting Menu. Press ▼ Key, enter into PVR File System. As follow:

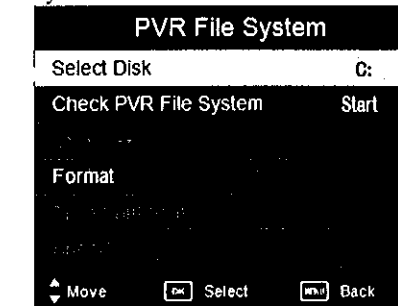

#### Function Instructions

Item	Instructions
Check PVR File System	
USB Disk	This option is not selected, according to Check PVR File System's test results to show different hint, the detection process shows, If Not insert USB devices, display Not Find Any USB Device; If insert USB device, display Pass,
Format	This option for USB devices can be MStar Format, OK/Enter and Right key can Enter into format, after format, the USB devices completing various functions of PVR If the function is normal, or USB devices pass the MStar Format, so it is display Pass here, .
Time Shift Size	This option is not selected, the finished Check PVR File System's Check action, can be displayed after being MStar Format USB device is used for Timeshift space, the size of the Format is doing when selected by the user;
Speed	This option is not selected, the finished Check PVR File System's Check action, displays the current available speed of

USB devices, and to remind users of this speed can be safely carried out action

**PVR Shortcuts functions**  
**Under DTV PVR shortcuts**

Key	Function
Record	enter into Record Mode
Stop	Exit the Record Mode, In the process, display Processing
Record/Exit	Switch Record Menu Mode
Play/Pause	Enter into Playback ,start the program broadcast is recording

**NOTE:** Record mode and Recorded list menu also available enter into relevant option of the PVR menu

**Record**

**Record Menu**

 
Record menu is divided into two types, one for the Full Mode, shows a more detailed recording of information, one is the Simple Mode, occupy very little screen space to represent the current in Record mode.

Both the menu mode by Record / Exit button switch.

In Record mode, Record menu often display is not disappear.

Specific menu mode as follows,

**A.Full Mode:**

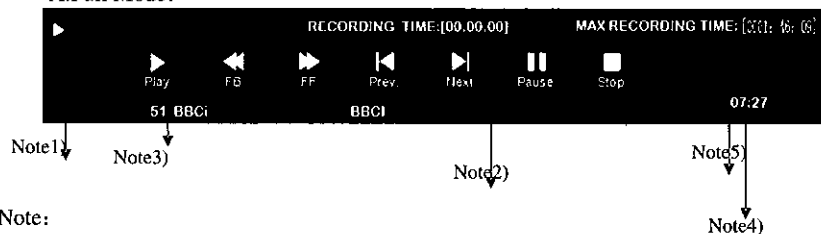

Note:

1. Record remark, fixed display;
2. recorded time;
3. The top row is the channel number and channel name, the following row is program name
4. Remaining recording time is calculated by the program
5. The current time

**B. Simple Mode**



Note: Under Simple Mode, only display Record remark and the recorded time, display at the Lower right corner of the screen, Record remark about 1 second flashing 1

**Timeshift**

Timeshift menu, with a similar Record menu, divided into two types, one for the Full Mode, display more detailed information, one is the Simple Mode, occupy very little screen space to represent the current in Timeshift mode.

Both the menu mode by Exit button switch

In Timeshift mode, Timeshift menu was often display not disappear.

Specific menu mode as follows,

Full Mode:



Note:

- 1) reflect the current state of playing, according to different operating to display, such as Play, Pause, Fast Forward, Fast Rewind, Next, Prev;
- 2) Timeshift progress bar shows the progress box indicates the total length available for Timeshift, gray ball that has already saved the contents of the percentage of the total length, the blue ball indicates the current playback position;
- 3) two times here, the first time "-" sign at the beginning, identify the currently playing content from the actual time gap, the second time to identify the length of the current contents have been saved;
- 4) that the current actual time;

Simple Mode:



Note:

- 1) In the Simple Mode, display the current Timeshift playing state, such as Play, Pause, etc., under the identity of the play shows the current play time away from the actual time;
- 2) Simple Mode display lower right corner of the screen, often significantly

#### Timeshift 's state of change and keys functions

##### Timeshift Start State

Timeshift mode can only enter through the Play / Pause button , pause the screen at this time, the system began to record the contents from the suspension point of beginning. This state is called Timeshift Start state, the key response to the following table

Key	Function
Play/Pause	Start Timeshift/enter into Timeshift Play state
Stop	exit Timeshift mode
Exit	switch Timeshift menu mode
Index	close Timeshift menu,pop-up Recorded list menu; From the Recorded List menu to enter into the Playback mode, and exit Timeshift mode; When exit from the Recorded List, re-display Timeshift menu;

## USB Instructions

### Overview:

 
From the Input Source menu, select USB port, then enter the Multimedia (MM) state. In the Multimedia (MM) state, the system in addition to playback of media files, but also the need for document classification, sorting, playlist management, information access and other similar files File Manager (Browser) work.

#### 1.PHONE



The red button to delete the selected file  
Select the green button, or cancel the whole election  
OK key, select or deselect individual files


Picture full screen, press the OK button will appear following the operation. As follows:

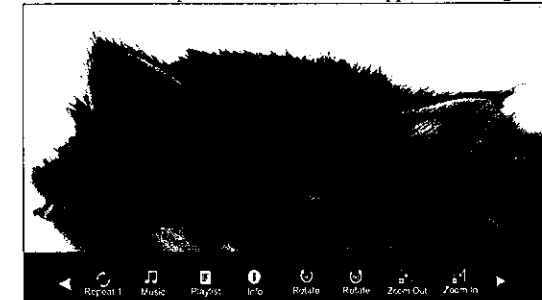



## 2.MUSIC

 
Elected to the songs in the song list, press the OK button to preview songs appear, with the song information. As shown below

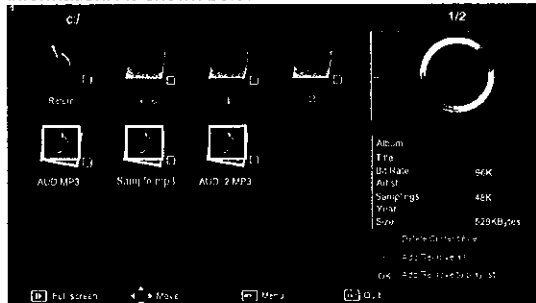

The red button to delete the selected file

Select the green button, or cancel the whole election  
OK button, single select to play the file

 
MUSIC playback state is a similar player software on the computer menu interface, the main song list (Playlist), basic information, the progress bar, the operating guidelines of several parts. Below:

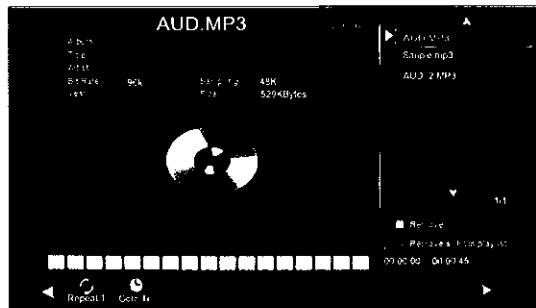

## 3.MOVIE

A.MOVIE state is full screen playback, the user in the Mark of the files in the Browser, the top-level folder from the start, according to alphabetical order, the order of play.

 B.MOVIE scaling requirements, while maintaining the original proportions of the case to the current screen can display the maximum zoom size.

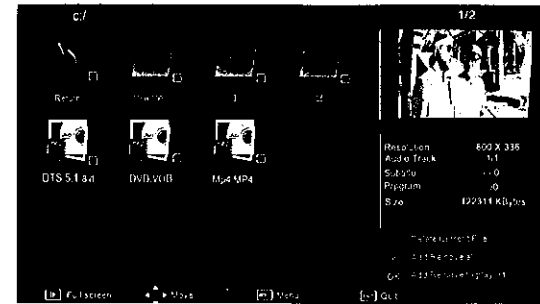

The red button to delete the selected file


Select the green button, or cancel the whole election

OK button, single select to play the file

Select the icon, appears in the video preview box on the map information with the video, PLAY button to play in full screen as below:




#### 4.TEXT

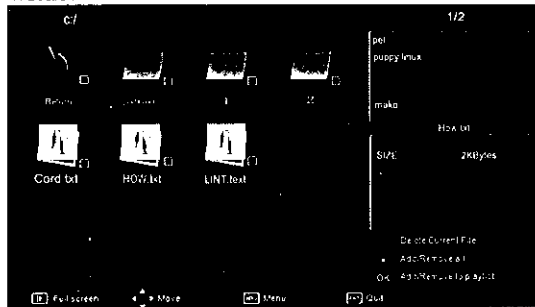 

The red button to delete the selected file  
 Select the green button, or cancel the whole election  
 OK button, single select to play the file

 Select the TEXT files, file preview box appears and the file information, as shown above; Press Play button to file full-screen playback. As follows:

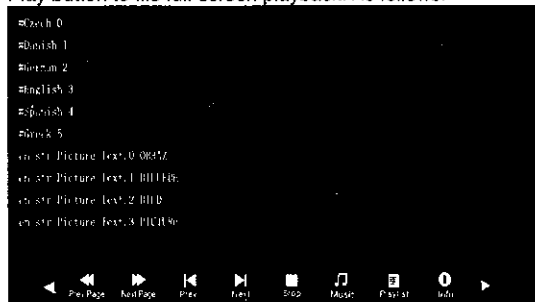

Instructions:

Prev page: previous page.

Next page: Next.

Prev.: The previous file.


Next: After a file.

Stop: Automatic suspension page.

Playlist: list of files appears in the screen's upper right corner.

Info: The current file information. Display the file name, with the file size:

#### 6 REMOTE CONTROL INSTRUCTIONS

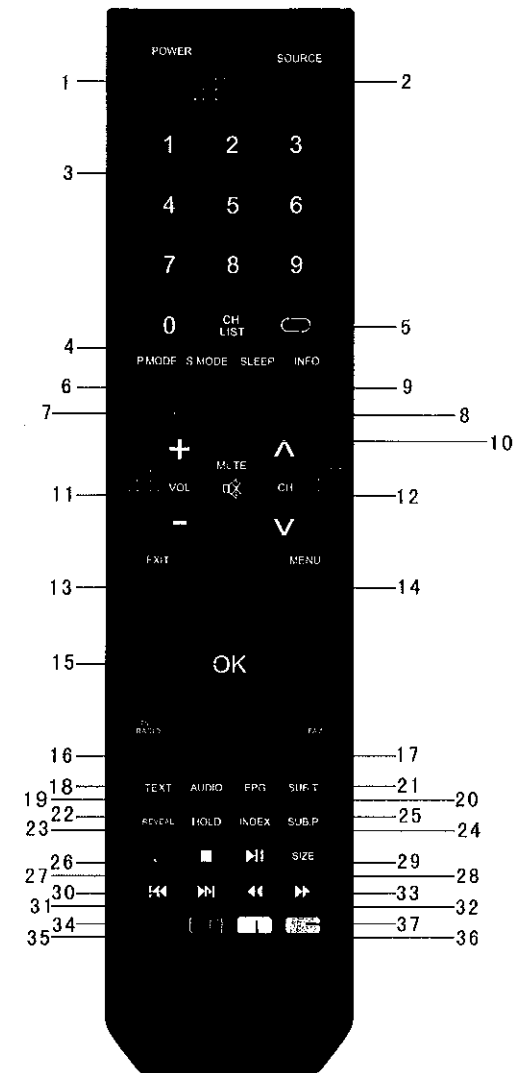 

TV Functions

**1.POWER:** Press the TV on and standby.

**2.SOURCE:** Press to display the input source menu.

**3.NUMBER:** Numeric buttons for direct channel access.

**4.CH.LIST:** channel list

- 5. : go back to the last viewed channel
- 6.P.MODE: Press to select the picture mode.
- 7.S.MODE: Press to select the sound mode
- 8.SLEEP: Press to select a preset time interval for automatic shut off.
- 9.INFO: Show Current Information "
- 10.MUTE: Press to mutes the sound.
- 11. VOL "+ "-" : Press to increase or decrease the volume.
- 12.CHANNEL "+ "-" : Press to change the TV channels.
- 13.EXIT: Exit the menu
- 14.MENU: Press to display the OSD menu.
- 15. , OK: Use to select on-screen menu items and change menu values
- 16.TV/RADIO: Press to change between TV and Radio
- 17.FAV: Press to display the favorite channel list which you stored before.
- 19.AUDIO: Stereo, Mono, Dual audio
- 20.EPG: Electronic Program Guide(EPG) display.
- 21.SUBTITLE: Display/OFF the subtitle on screen
- 24.INDEX: Tune out the Recordd List menu
- 27. :STOP
- 28. :PLAY/PAUSE
- 29.SIZE: Picture size
- 30. : Previous key
- 31. : Next key
- 32. : Fast return key
- 33. :Fast forward key
- 34/35/36/37. Colour buttons: Channel Edit function

PVR Function

- 26. : Press this button to directly record the DTV into USB disk
- 28. :Timeshift function

TEXT functions

- 12.CHANNEL "+ "-" : Press to change the TV channels.
- 18.TEXT: Teletext function
- 21.SUBTITLE: Teletext subtitle
- 22.REVEAL: Teletext reveal
- 23.HOLD: Teletext hold.
- 24.INDEX: Teletext index
- 25.SUBPAGE: Teletext subpage
- 29.SIZE: Teletext size
- 34/35/36/37. Colour buttons: Teletext function

USB Functions

- 27. :STOP
- 28. :PLAY/PAUSE
- 30. : Previous key
- 31. : Next key
- 32. : Fast return key
- 33. :Fast forward key
- 34/35/36/37. Colour buttons:Media function


## 7 REMOTE CONTROLS SETUP

 - a: Open the cover
- b: AAA size batteries, When inserting the batteries, make sure correct polarities as per "+" and "-" marks on the batteries and within the battery compartment
- c: Replace the battery cover

### 7.1 BATTERY USAGE CAUTION:

To prevent battery from leakage which may result in bodily injury or damage to the remote, please do as follows:

1. Install all batteries correctly, and as marked on the remote control.
2. Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.).
3. Remove batteries when the remote is not used for a long time.

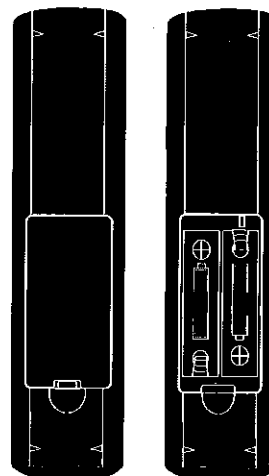

## 8 ACCESSORIES

1. A Power Line
2. One Remote Control
3. Two Batteries 1.5V
4. One User Manual

## 9 TROUBLE SHOOTING AND ADVICE

Before calling our SAS centre, please check if you can solve the troubleshooting by yourself.

Troubleshooting	Control
No signal	Please check that all cables and cordons are correctly plugged in.
No color shades	Adjust the contrast, the colour and the brightness
Stain show on the screen.	May be result from a lighting signal from car, motor, neon light and other electrical devices or appliances.
Double or multiple display image	May be the result of an electrical wave disturb from other TV, Computer and Game machine or Radio
Snow on the screen	The cables of the antenna are not correctly plugged in.
The remote control does not work	Please check the batteries order and alignment. Check that the IR of the remote control is not hidden by something.
"Zip" made noise on TV cover	Even if the display image is correct, the noise may come from an unsteady fixation of the panel.
No sound	Make sure that you have not press the MUTE button of the panel or of the remote control.

## 10 SPECIFICATIONS

Screen Size	26Inch	
Display Type	TFT LCD TV	
Aspect Ratio	16:9	
Power Source	100-240V~,50/60Hz	
	≤55W	
TV System	PAL / SECAM	
Video Input Format	PAL / NTSC/SECAM	
Antenna Input	Standard antenna socket 75 Ω	
Audio Output	L / R 10W*2	
VGA Input Format	Standard VESA mode	
Input	AV	Video:1.0Vp-p, 75Ω; Audio20kΩ; RCA
	PC	Standard VESA mode
	HDMI	MAX 1080P/60Hz
	YPbPr	1.0Vp-p 75Ω;RCA,MAX 1080P
Net Weight	9±0.5kg	
Net Dimensions with stand(L * W * H)	665*201*501mm	
Net Dimensions without stand(L * W * H)	665*105*456mm	

*This manual is only for your reference, any changes to the design and specification will not be advised.*