



Single / Dual IR Emitter

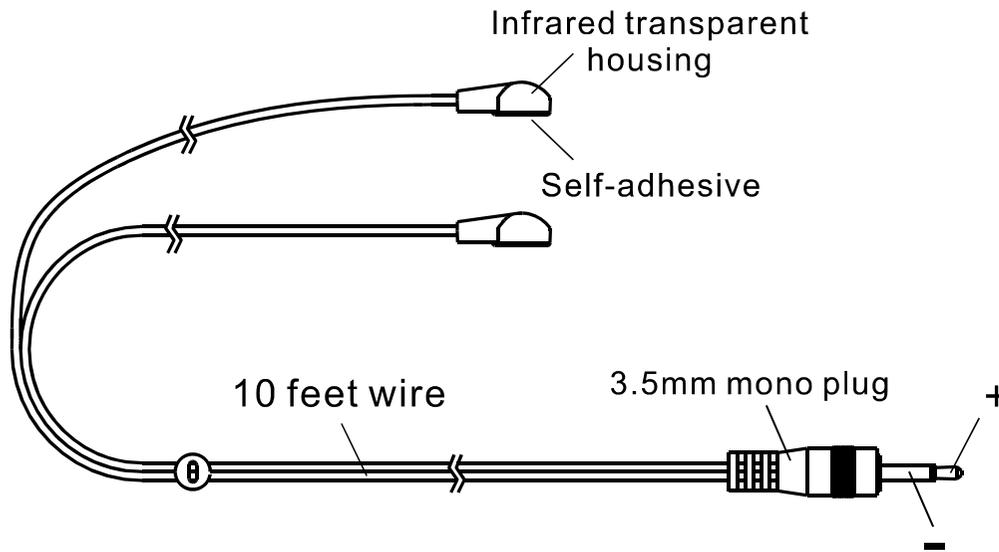


A. Standard installation

1. IR emitter attached directly to IR sensor window.
2. More reliable activated

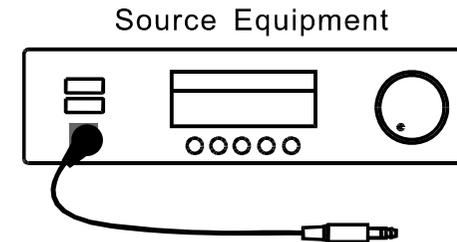

B. Attach emitter at inside of shelf

1. Attach emitter on above or below of the IR sensor.
2. Less reliable activated.

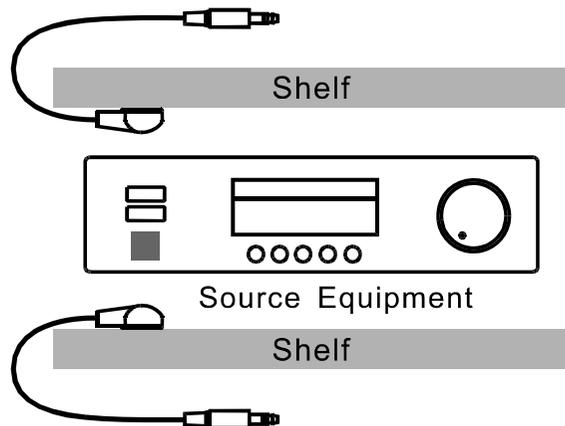

C. Cabinet with door installation

1. Attach emitter on door, round shape facing the IR sensor.
2. Less reliable activated.

