


If the screen looks boxed in / squashed:

On your remote press on the **Menu** button from there on follow the instructions below:


1. Choose **Main Menu** and press **OK** on your remote



2. Browse down to **Edit Settings** (using the **P-** button) and then press **OK**.

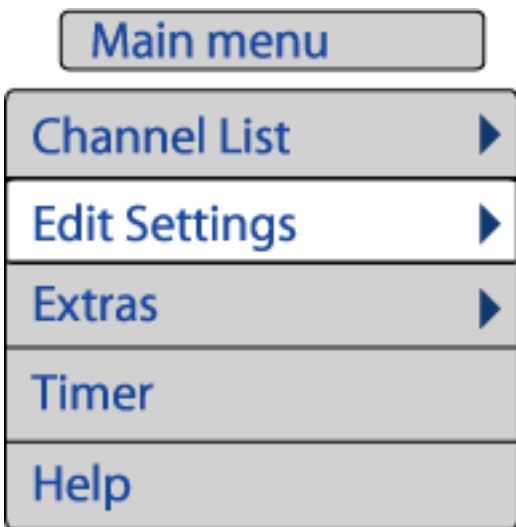

3. The following sub menu should appear. Choose **Signal Output** and press **OK**.

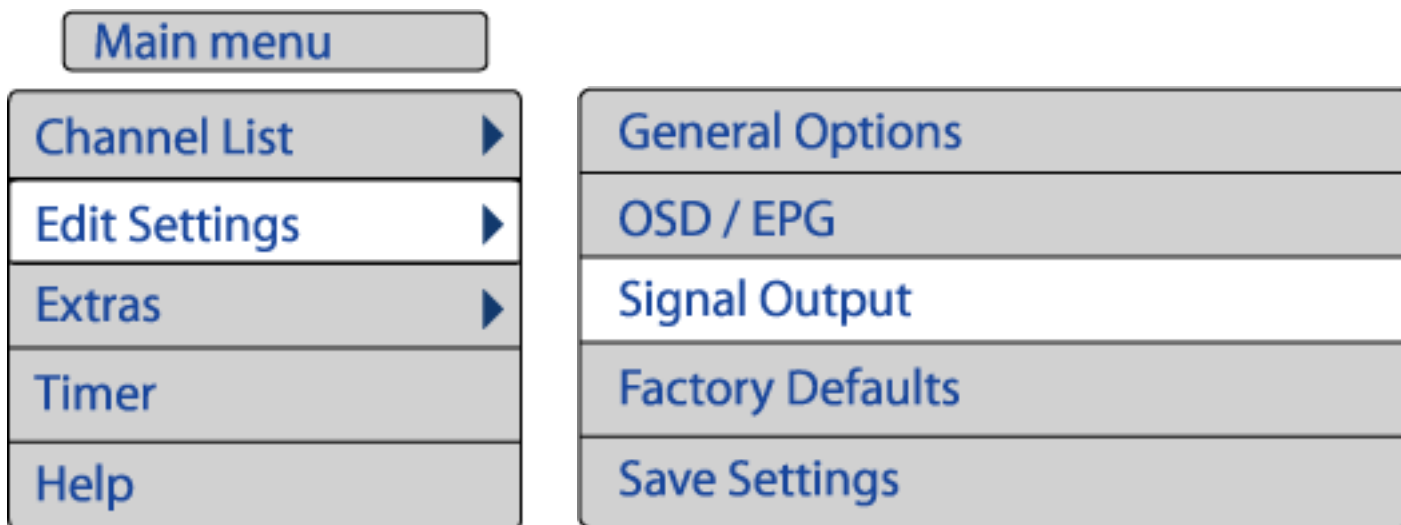

4. On the signal output menu while the **TV-Screen** option is highlighted, use your remotes **-** **+** button to change your selection to your desired screen type.

Edit Settings > Signal Output

TV-Screen:	4:3 (full screen)
Video format TV:	RGB
Video format VCR:	CVBS
V.-format VCR In:	CVBS
Volume-Bypass:	None

Exit out of your menu by pressing the **Exit** button on your remote 3 times.

Related topics:

[Connecting your Set Top Box to your TV](#)

[Setting up your STB](#)